


HWH COMPUTER-CONTROLLED AIR LEVELING SYSTEM

CAUTION: READ AND UNDERSTAND ENTIRE OPERATOR'S MANUAL INCLUDING CAUTIONS, BEFORE OPERATING. THIS SHEET IS FOR QUICK REFERENCE ONLY.

AIR LEVELING

AIR LEVELING WILL OPERATE FASTER IF THE ENGINE IS RUNNING

1. SET PARK BRAKE.
2. COACH'S TRANSMISSION MUST BE IN THE PROPER POSITION FOR PARKING.
3. PRESS "AIR", INDICATOR LIGHT WILL COME ON STEADY.
4. PRESS "AIR" A SECOND TIME. INDICATOR LIGHT WILL FLASH. THE COACH WILL LEVEL USING THE AIR SUSPENSION.
5. STEADY AIR OPERATION LIGHT INDICATES LEVELING IS COMPLETE.
6. TURN IGNITION TO "OFF". SYSTEM WILL RECHECK LEVEL EVERY 30 MINUTES. PRESSING "OFF" OR RELEASING THE PARK BRAKE, PROVIDED THE IGNITION IS IN THE "ON" POSITION, WILL RETURN SUSPENSION SYSTEM TO THE TRAVEL MODE.

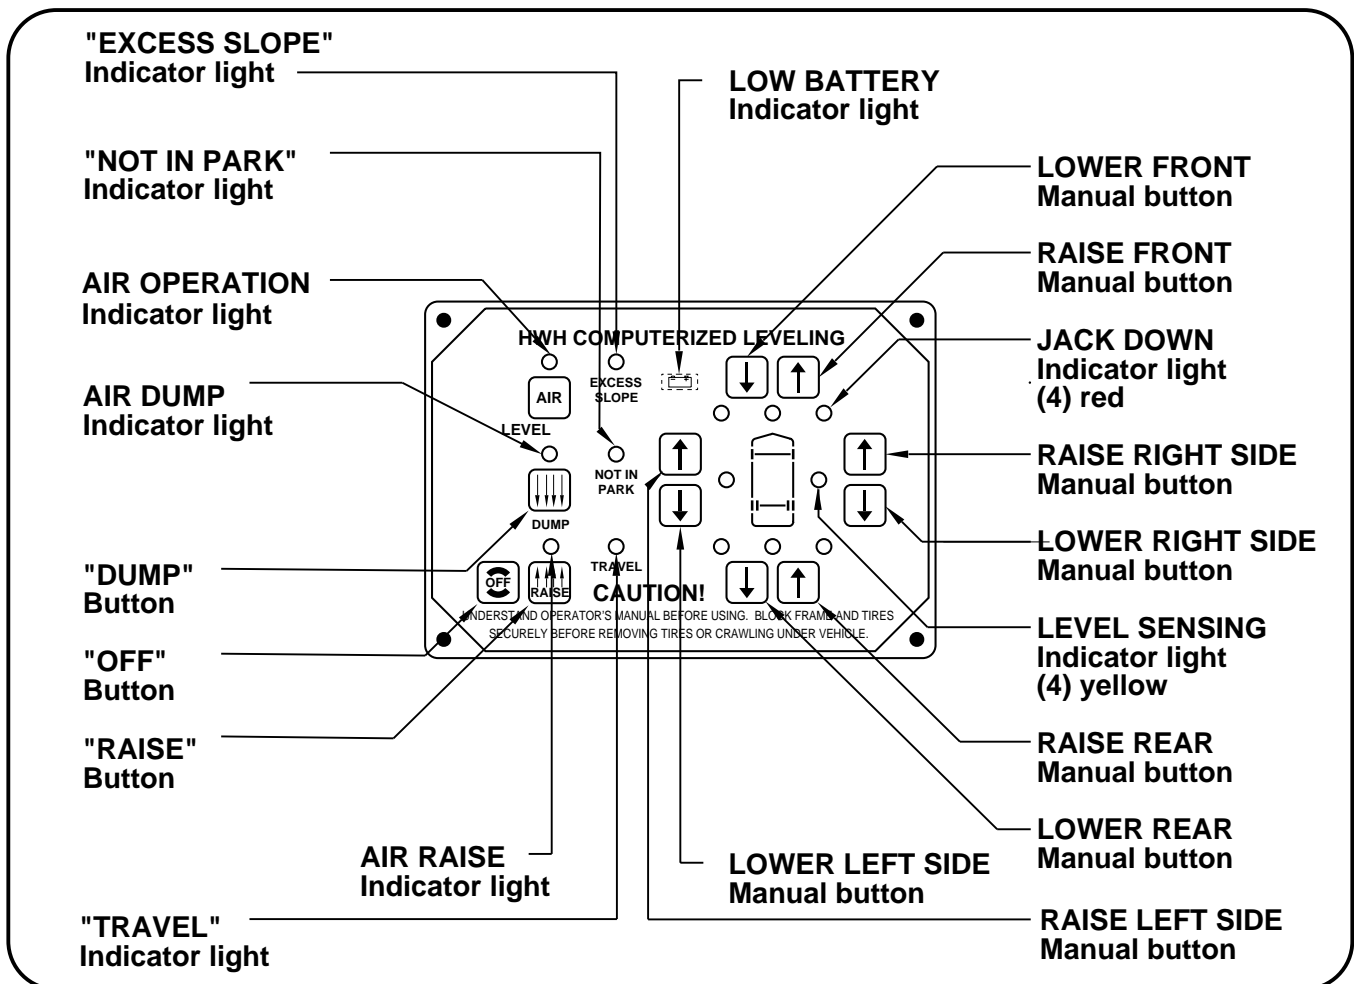

(CONTINUED)

ML20723/ML9287/MP35.9907
01SEP99

HWH COMPUTER-CONTROLLED AIR LEVELING SYSTEM (CONTINUED)

MANUAL OPERATION

AIR LEVELING WILL OPERATE FASTER IF ENGINE IS RUNNING.

1. SET PARK BRAKE.
2. PLACE COACH'S TRANSMISSION IN THE PROPER POSITION FOR PARKING.
3. AT THIS TIME AIR MAY BE DUMPED OR ADDED TO ALL AIR BAGS BY PRESSING THE "DUMP" OR "RAISE" BUTTONS.
4. PRESS THE "AIR" BUTTON ONCE.

ON THE RIGHT HAND PORTION OF THE TOUCH PANEL NOTE THE OUTLINE OF A COACH AND THE VARIOUS RAISE (UP ARROW) AND THE LOWER (DOWN ARROW) TOUCH BUTTONS.

5. PRESS THE RESPECTIVE RAISE (UP ARROW) BUTTON TO RAISE THE RESPECTIVE SIDE OR END OF THE COACH. A YELLOW LIGHT TO THE FRONT, SIDE OR REAR OF THE COACH OUTLINE INDICATES THAT SIDE OR END IS LOW. THE LOWER (DOWN ARROW) BUTTONS WILL LOWER THE COACH.
6. THE LEVELING SYSTEM WILL TURN ITSELF OFF IN APPROXIMATELY 4 MINUTES IF THE AUTOMATIC LEVELING SEQUENCE IS NOT USED. IF THE IGNITION KEY IS IN ON, THE VEHICLE MAY RETURN TO RIDE HEIGHT.

DUMP/RAISE FUNCTION

THE "DUMP" AND "RAISE" BUTTONS WILL ONLY WORK WITH THE IGNITION ON.

THE "DUMP" AND "RAISE" BUTTONS WILL LATCH IN WHEN PUSHED AND LOWER OR RAISE THE VEHICLE UNTIL THE "OFF" BUTTON IS PUSHED OR THE VEHICLE SPEED EXCEEDS 15 MPH.

CAUTION: DO NOT TRAVEL AT SPEEDS GREATER THAN 5 MPH IF THE SYSTEM IS IN THE "DUMP" OR "RAISE" MODE.