



ABRIDGED OPERATING INSTRUCTIONS


HWH® Touch Panel-Controlled Hydraulic Leveling System with Straight-Acting Jacks

CAUTION: Read and understand entire Operator's Manual, including CAUTIONS, before operating. This sheet is for quick reference only.

MANUAL LEVELING

1. Place the gear selector in the parking position. Apply the park brake and block the tires securely.
2. Turn the ignition switch to "Accessory".
3. Press the "LEVEL" Button. The Level Mode Indicator Light will come on steady.
4. Push the "DUMP" Button. It is recommended to wait until the air is completely dumped from the vehicle suspension before the leveling procedure is started.
5. Place a single pad under each jack, if needed, at this time.
6. Using the Yellow Level Lights, extend the jacks accordingly by pressing and holding the corresponding Extend Button (Up Arrow) on the touch panel to raise the side or end of the coach that shows low.
7. Stabilize the vehicle by extending remaining jacks to the ground. Do this by pushing the Front and/or Rear Extend Buttons. Do not use the Right or Left Extend Buttons.
8. Push the "OFF" Button on the touch panel.
9. Turn the ignition switch off.

NOTE: Jacks will always work in pairs: front, right side, left side or rear. Level side to side, if necessary, before front to rear.

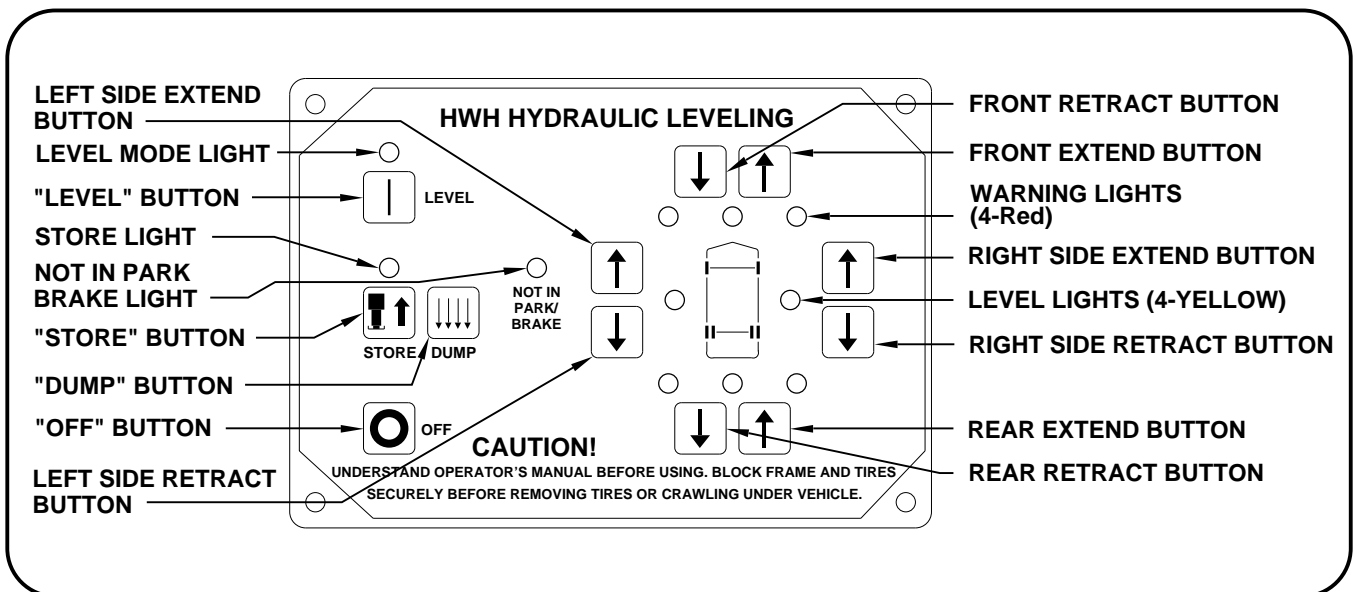


STORE OPERATION

CAUTION: The operator must be sure all objects and/or persons are clear of the vehicle before storing the leveling system.

1. Start the vehicle engine.
2. Press the "STORE" Button. The jacks will store and their respective warning lights will go out. (Do not push the "OFF" Button.)
3. The vehicle should return to ride height.

CAUTION: Do not move the vehicle while the jacks are extended or still in contact with the ground. This vehicle is equipped with straight-acting jacks. Moving the vehicle with the jacks extended can cause severe damage to the jacks and/or the vehicle and create a driving hazard. Do not rely solely upon the warning lights or buzzer. It is the operator's responsibility to visually check that all jacks are fully retracted into the Store/Travel position. It is the operator's responsibility to check that the vehicle suspension is at the proper ride height before traveling.

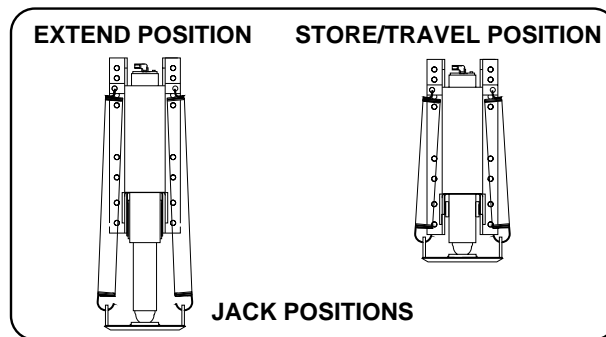

ROOM EXTENSIONS

IMPORTANT: If this vehicle is equipped with a room extension system, read the Owner's Manual for instructions on using and operating the room extension.